

ME995-7D-S LITRES (Decimal point) PRESET CONTROLLER

FEATURES

- 3-Digit LED display
- 4x LED status indicators
- Preact function
- Preset maximum limit
- Missing pulse detection
- Counts in 0.1 Litres upto 99.9
- Optional PLC and computer interface
- Signal conditioning with K-factor adjustment
- Compatibility with most flowmeters



The ME995-7D-S LITRES decimal point preset Batch Controller can be used with most pulse output flowmeters, for preset liquid batching applications.

The controller incorporates a preact (overflow deduct) feature, K-factor adjustment, 4 LED status indicators and diagnostic safeties. With the ME995-7D-S Batch Controller using the same 10-pin Weidmuller receptacle plug as the previous models, changeover or upgrade is instant with no rewiring necessary. The ME995-7D-S can be easily interfaced with PLCs, thus incorporating the controller's safety features and providing a backup batch facility.

With 3 rotary selector switches, batch quantities are easily selected. The batch operator can also visually refer to the numbered selector dials for the selected batch quantity. Command operations are by user-friendly toggle switches, and four LEDs indicate operational status conditions. Batch counting is in 0.1 Litre increments upto a maximum 99.9 Litres.

The ME995-7DS batch controller operates from standard 220 - 260 vac (or optional 24vac, 110vac or 12 - 24 VDC) voltage supplies. Contact output drive is via one (or optional two) relays. (or with –OC open contact drive to allow control output switching drive of any external voltage). Standard controllers are in panel mount form, or optionally can be housed in a metal box or IP65 ABS wall mount enclosure.

The ME995-7D-S controller is designed for compatibility with all ManuFlo flowmeters and most other brands. Calibration is settable via rear selector dials. Default is x1 input for MES20/AMM20 flowmeters.

SAFETY FEATURES

- * **LIMIT (LM) LED** activates if batch cycle reaches locked internal limit or if circuit diagnostics detect internal chip problem. There is subsequent automatic shutoff of voltage contact drive.
- * **PULSE FAIL (PF) LED** activates if no pulses arrive within 1.5 seconds (variable) initial start time period, or if pulses are interrupted during batch cycle and fall below (variable) pulse scanning time (typical 30Hz). There is subsequent automatic shutoff of voltage contact drive output.
- * **FLOW (FL) LED** monitors and indicates incoming pulses from field flowmeter, or if TEST is used.
- * **CONTACT DRIVE (CD) LED** indicates voltage contact output drive when pump or solenoid is activated.
- * Internal audible **ALARM** sounds momentarily upon completion of batch cycle, and continuously if PULSE FAIL or LIMIT LEDs are activated or if overflow runs 2.6 Litres over selected batch quantity.

Warning: if CONTACT or FLOW LED indicators are on, but controller not counting, discontinue use and call for service.

- * To operate, push each of the toggle switches ON-OFF, START-STOP and TEST-RESET to the desired function.
- * Switch the power ON to unit. Select required batch quantity using rotary number dial selector switches.
- * RESET unit. The LED displays zero and all LED indicators and alarm turns off. The unit is ready for batching.
- * START unit; voltage contact drive activates. CONTACT DRIVE LED illuminates indicating pump or solenoid are energized, followed by FLOW LED illuminating, indicating pulsing and operation of flowmeter. The digits begin counting upward towards the selected batch quantity.
- * Upon digits reaching the selected batch quantity the alarm sounds (short beep) indicating completion of batch; CONTACT DRIVE and FLOW LEDs turn off. LED display digits and selected batch quantity should correspond. If LED digits overshoot target, use PRACT (inflight, freefall) overflow deduct dials (located at rear of controller unit) to scale back the difference.
- * To interrupt unit before completion of batch, push STOP toggle; digit counting will stop, drive contact off. Push START toggle to resume batch.
- * TEST toggle is used to test digit counting, switch contacts, alarm conditions or generate output pulses for computer interfacing. TEST does not activate pump or solenoid.

Warning: if CONTACT or FLOW LED indicators are on, but controller is not counting, discontinue use and call for service.


CALIBRATION

1) The Batch Controller is initially set up for the connected flowmeter using the Controller's Calibration rotary selector knobs (at rear of unit) marked UNITS, TENS and HUNDREDS to match (flowmeter o/p pulse value)/10. e.g. MES25 is 550 pulses/Litre, so Calibration = 550/10= 055.

Note reverse sequence of dials: U=5, T=5, H=0, is a value of 055.

On-site calibration adjustment and test:

- 2) Must adjust what is shown on the Batch Controller display (red LEDs) to match a known amount dispensed, using the Calibration knobs. So, say, set Controller to 19.0L, and batch into a 20 Litre container.
- 3) If the amount collected is **more** than is shown on the LED display, then **decrease** the set calibration value by the same % difference
e.g. if collected 20L when 19.0L on LEDs, this is 1L more or 5% over (1/19x100%). So, decrease the calibration value by 5% i.e. if calibration set to 055, new value is 055-5% = 055-3 = 052 (Set Calibration U=2, T=5, H=0).
- 4) If the amount collected is **less** than is shown on the LED display, then **increase** the set calibration value by the same % difference.
e.g. if collected 18L when 19.0L on LEDs, this is 1L less or 5% under (1/19x100%). So, increase the calibration value by 5% i.e. if calibration set to 055, new value is 055+5% = 055+3 = 058 (Set Calibration U=8, T=5, H=0).

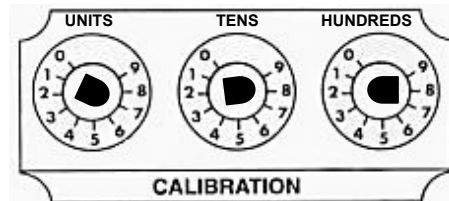


Examples of calibration settings for use with pulse flowmeters

Flowmeter	Size Ø	H T U	Signal input multiplier
MES20	20mm	1 0 0	x1
MES25	25mm	0 5 5	x1
AMM25	25mm	0 5 0	x1


5) **PRACT:** Calibrating inflight overflow is via two rotary select knobs marked "TENS" and "UNITS" of 0.1 LITRES, located at the rear of controller. Simply set knobs to the overflow reading as indicated by the LED display.

Example: You select 10.0 Litres, batch the quantity, 11.0 Litres is shown on display, and 11.0 Litres is collected in drum. A valve may take extra time to close, so what is selected on dials usually overshoots on display. So, set 1.0 Litres on PRACT to deduct the 1.0 Litres overshoot (PRACT T=1, U=0 is a value of 10 x 0.1 = 1.0 Litres). Next batch, the selector Dials, LED reading and amount collected in drum will all be 10.0 Litres.

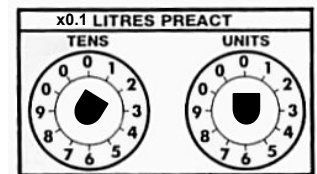

SPECIFICATIONS

Power supply	220-260 vac (optional 24vac, 110 vac or 12-24 VDC)
Output to flowmeter	12 VDC upto 100mA
Relay output	Max. 240 vac, 1A. Other outputs on request. -OC option: Open Contact drive.
Frequency input	5 KHz. with x1 input
Display	3 digits, 1 dec.place, Display LED (14mm H)
Connection	10 pin mating plug and socket
Fuse	1 Amp (5 x 20mm case)
Batch selection	Visual rotary select switches
Batch commands	Push toggle switches
Mounting	Panel mount
Instrument housing	ABS hi-impact case mould
External dimensions	206 L, 130 H, 90 D mm
Panel cutout	190 L, 122 H mm
Weight	1 kg

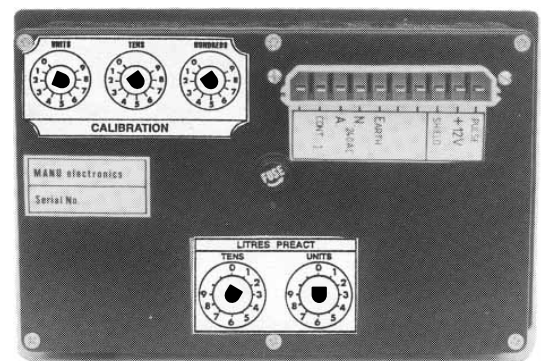

Due to continuous product development, specifications are subject to change without notice.






ME995-7D-S Batch Controller, 240 vac supply and output, with 12 VDC power to flowmeter (standard).

Options:


Code	Description	Code	Description
-DC-OC	12-24 VDC power supply input/output drive, with Open Contact output drive (5 A) which is via external voltages	-5P	5-pin computer interface plug (start, stop, reset, pulse,+12V) for use with ME5IC interface card for Jonel, COMMANDbatch etc PLCs.
-24VAC	24 vac powered and output.	-MC	4-pin PLC/Computer Command (Start/Stop/Reset) interface plug.
-110	110 vac powered and output.	-MC2	<ul style="list-style-type: none"> • 2-pin plug for scaled 4N33 open collector pulse output (0.1 pulse/Litre). • Includes 4-pin external command (Start/Stop/Reset) interface plug.
-OC	Open Contact pump/valve output, for use with any driving voltage (maximum 5A current).	-MC2-C	Compubatch interface: 2-pin plug with OPTO 4N33 pulse output. Includes 4-pin external command (Start/Stop/Reset) plug.
-A0	Contact output: alarm/batch-complete voltage relay or logic state	-SSRBC	External command: Start/Stop/Reset, for connection to HB2500-SSR housing box, or for remote control facility.
		-S12	switch: two product changeover output drive. Allows 2 flowmeter-inputs/pump-drives.

e.g. "ME995-7D-S" is the standard Batch Controller, 240vac powered, without any of the options, whereas "ME995-7D-S-MC2" is an ME995-7D-S Batch Controller with a scaled open collector pulse output, and a Start/Stop/Reset computer interface.


HOUSING ENCLOSURES

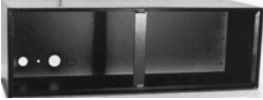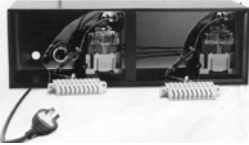SHB	Single enclosure. Powder coated metal.		
SHB1	Single enclosure. Powder coated metal. Wired with 240vac contactor (for 1 hp pump), plug-in 240 vac pump outlet and plug.	<i>SHB</i>	<i>SHB1</i>
SHB1-T	as for SHB1 above, but with terminal wiring entry connection instead of 240vac pump outlet		
DHB	Dual enclosure. Powder coated metal.		
DHB2	Dual enclosure. Powder coated metal. Wired with 2x 240vac contactors, 2x pump outlets, and 2x plugs for Batch Controllers.	<i>DHB</i>	<i>DHB2</i>
DHB2-T	as for DHB2, but with terminal wiring entry connections (instead of mains lead and pump outlets).		
HB2510	IP65 waterproof single enclosure.		<i>HB2510-SSR IP65 enclosure shown with ME3000 Batch Controller</i>
-SSR	External commands: Start/Stop/Reset. IP65 rated (option fitted to HB2510).		

ME995-7D-S

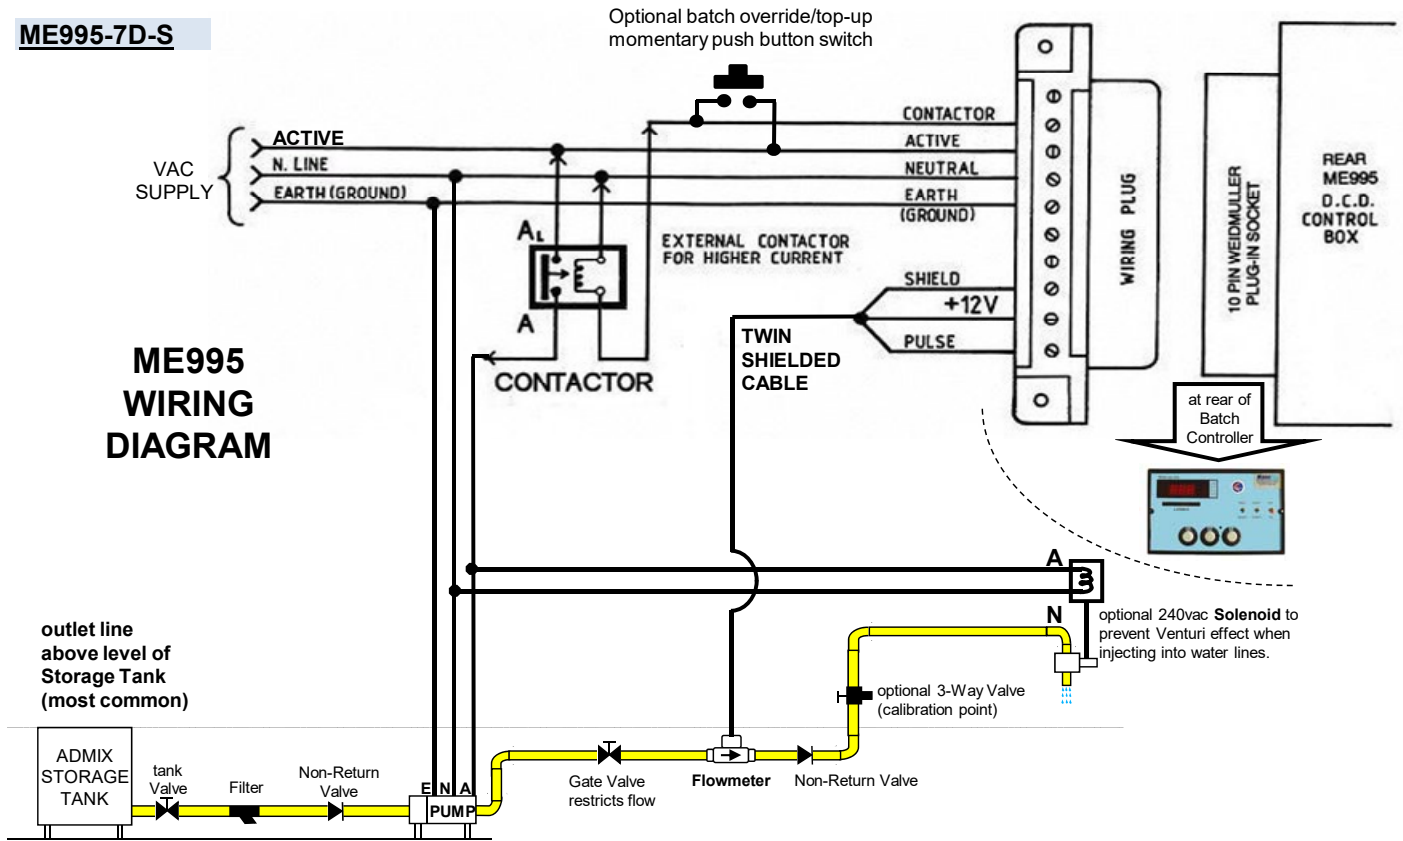

Standard AC Wiring for Pump and optional Solenoid

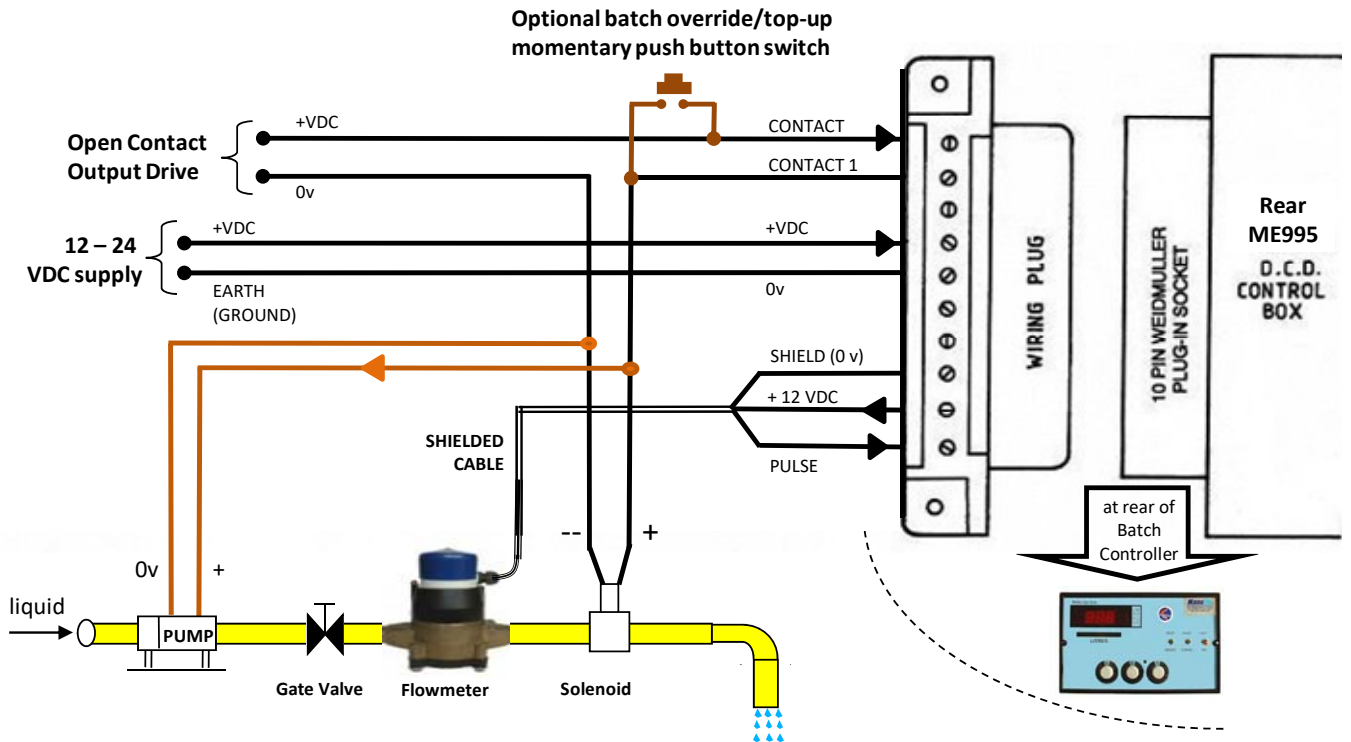

Wiring for DC-powered Batch Controller with DC Open Contact Output Drive to Pump and/or Solenoid

NOTE: if current draw of solenoid is > 0.5 Amps, or if using a pump, then install a contactor